


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	MK	KB	2950	10/05/23	Replaced SA393 with SA460 and replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					






TB3HPR/FL KammBar

Instructions

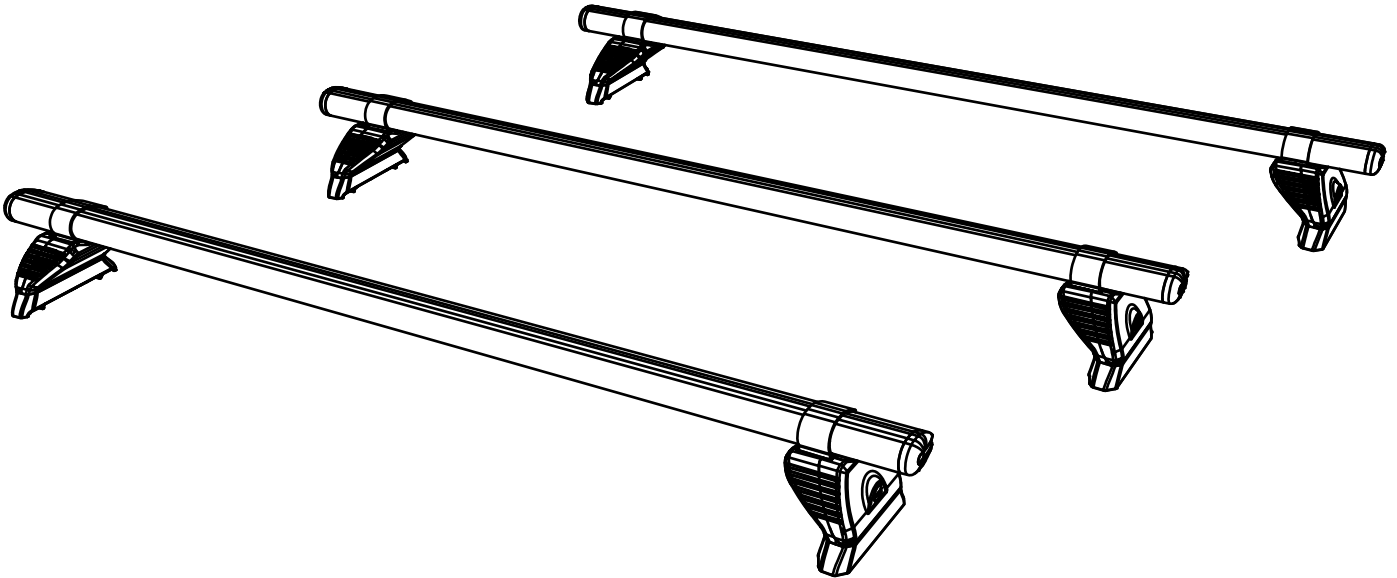


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

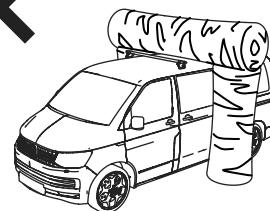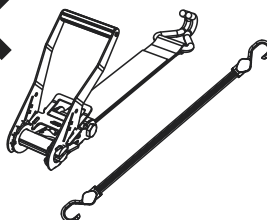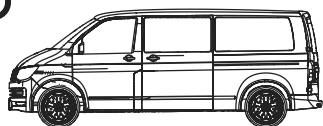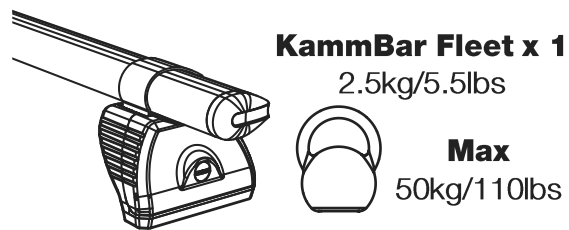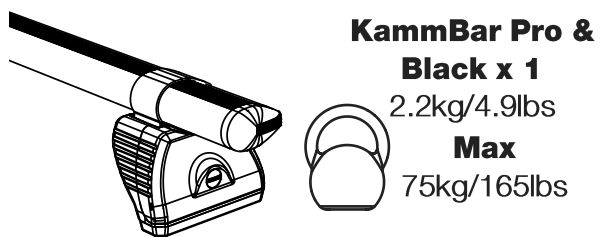


KammBar Pro & Black

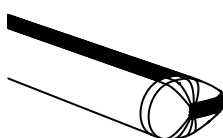


SA419 x 3 ☐

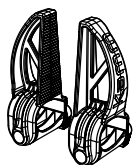

KLS2 x 1 ☐

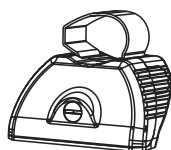


SA397 x 3 ☐

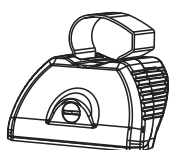


SA398 x 3 ☐


KammBar Fleet

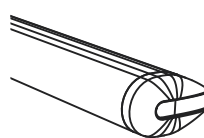


SA460 x 3 ☐



C04 x 3
optional upgrade

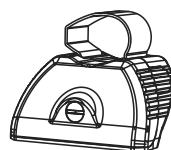


SA397 x 3 ☐

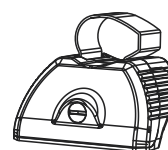


SA398 x 3 ☐


Fitting Kit




PS178 x 4 ☐




PS023 x 6 ☐

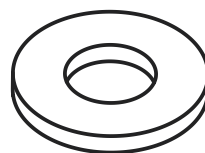


FW002 (M8) x 6 ☐

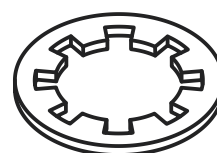

FW009 (M8) x 6 ☐



FS101
(M8 x 45) x 6 ☐




FN035 (M8) x 6 ☐




FT01 x 1 ☐


1.

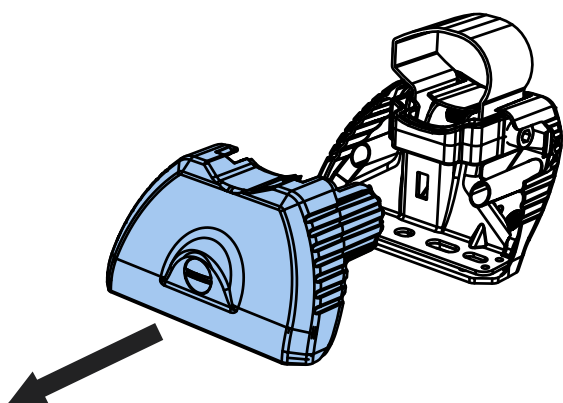


2.

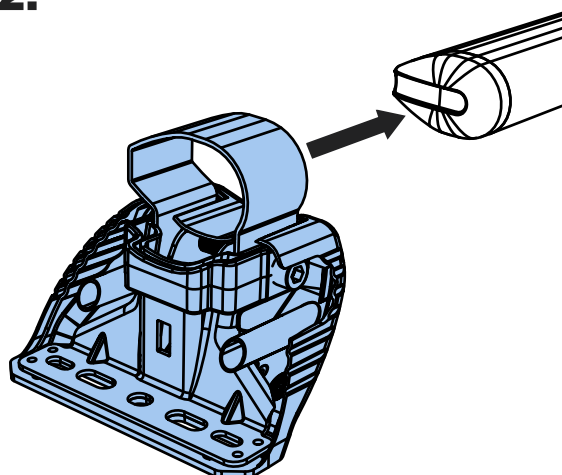


3.

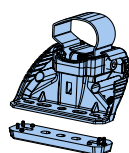


SA397
PS178




SA397

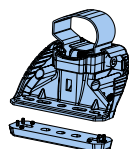


SA397
PS178

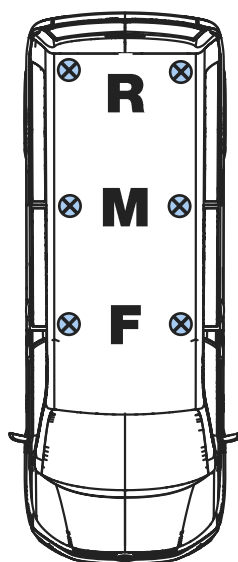


SA398
PS178

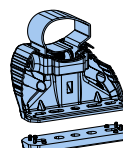


SA398




SA398
PS178

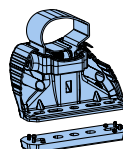

4.






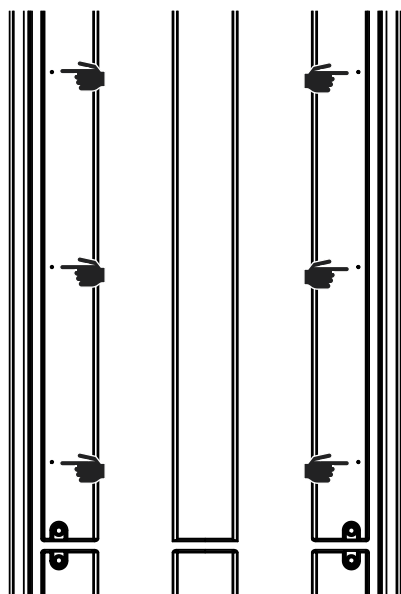


5.

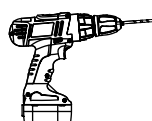


1st - Ø 4mm
2nd - Ø 9mm




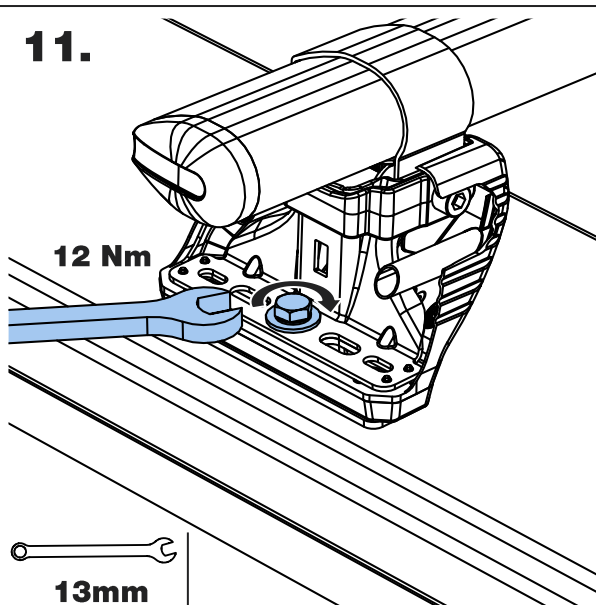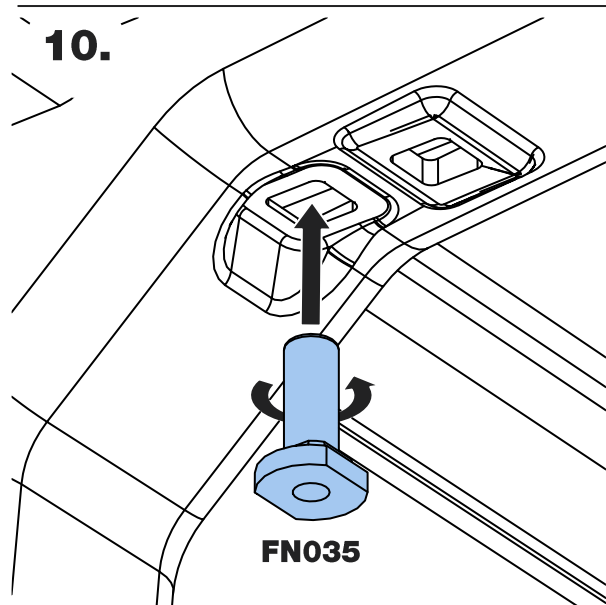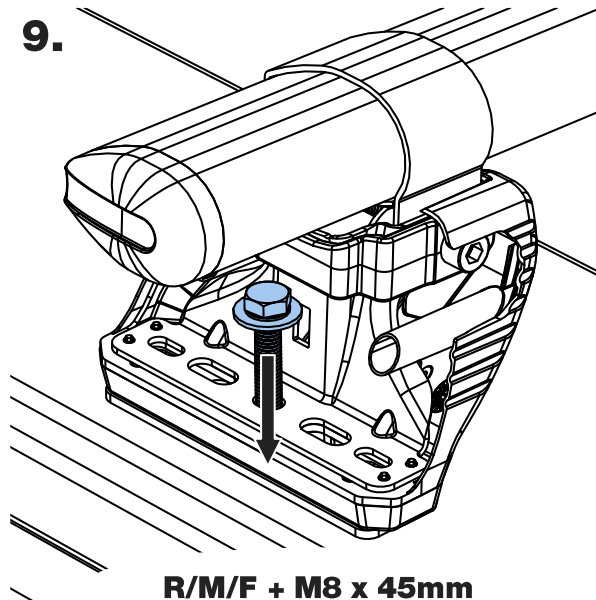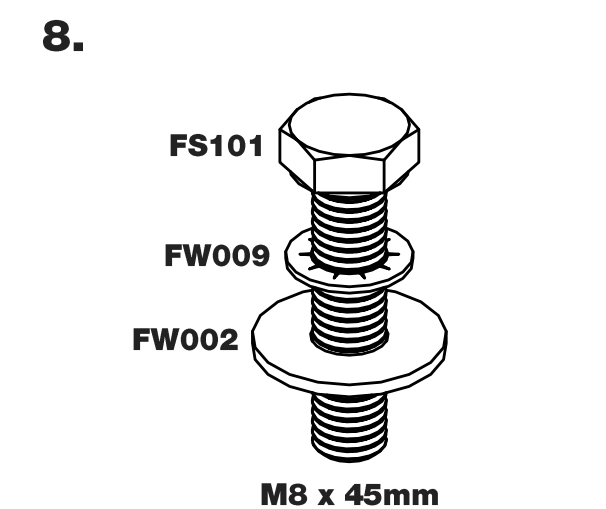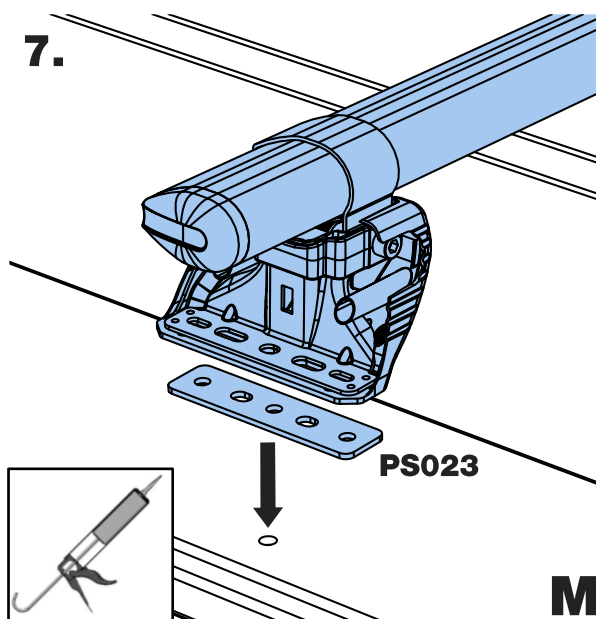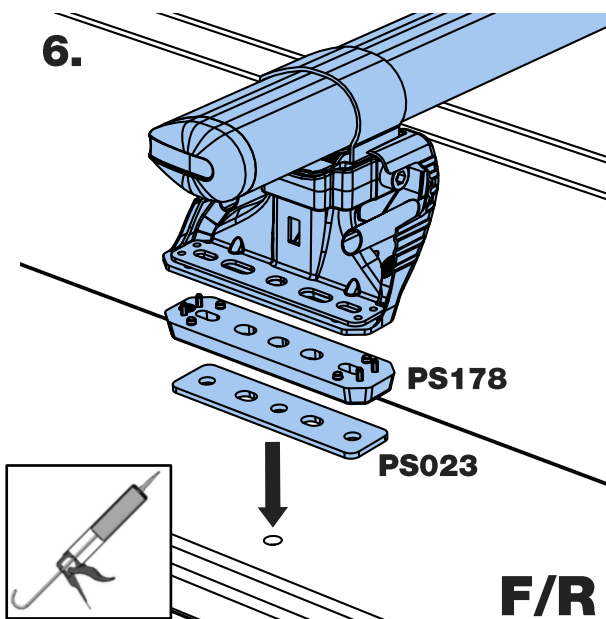


12.

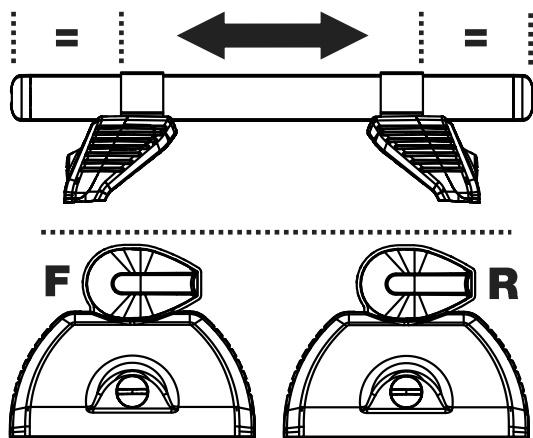

13.

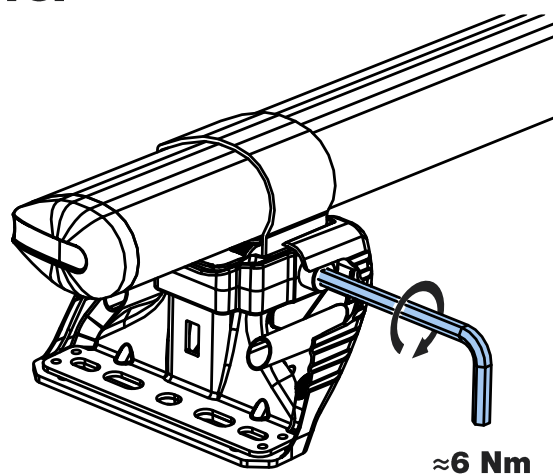

14.

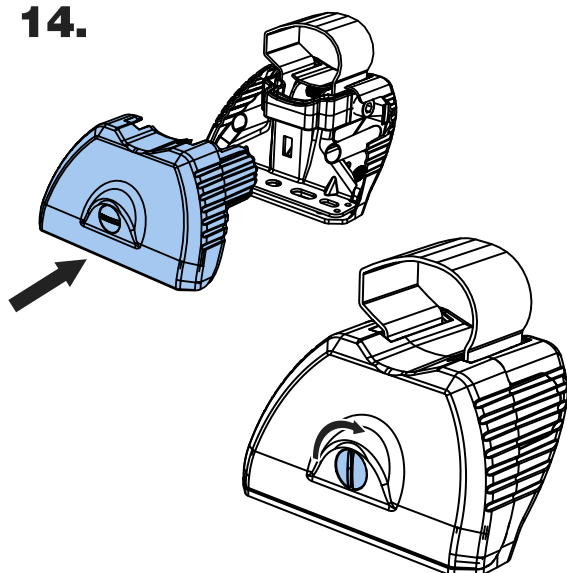

15.

