
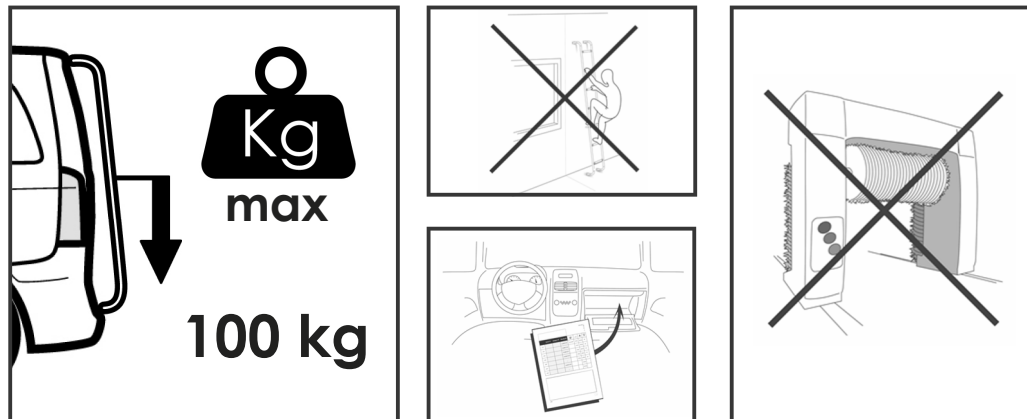


27/08/2020 — NM-ECH ALU
NTME-001 Ind 2-A

F/ Notice de montage Echelle aluminium sur porte arrière droite
GB/ Installation instructions Ladder in aluminium for the right rear door
D/ Montageanweisungen Leiter aus Aluminium für die rechte Flügeltür
NL/ Montagehandleiding Ladder in aluminium op rechter achterdeur
I/ Istruzioni per il montaggio Scaletta in alluminio su porta posteriore destra
E/ Instrucciones de montaje Escalera de aluminio para puerta trasera derecha

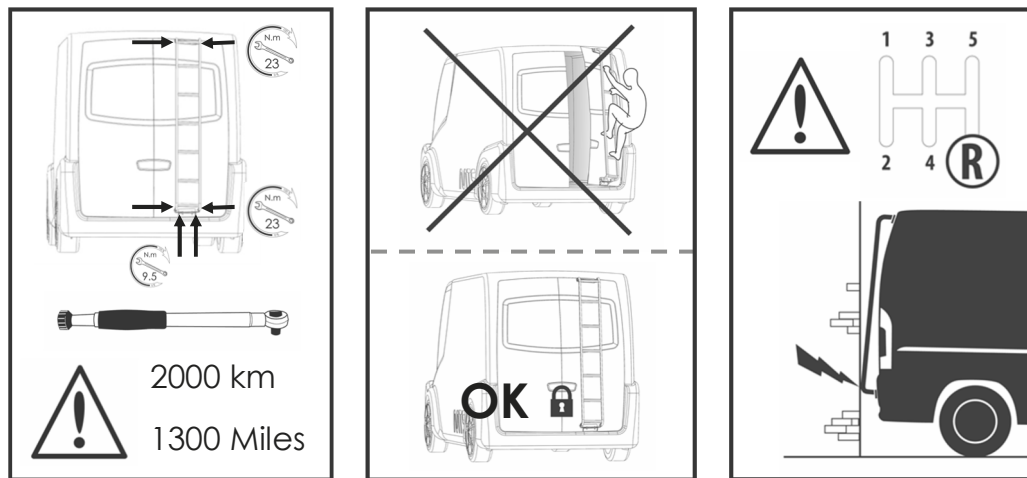


				LCE2000		
		1x 13 1x 10	1x 13 1x 10	1x		
Flat	Ducato	H1	2006	0110LAE2000	0110LAE210	-
		H2		0110LCE2000	0110LCE210	1
		H3		0110LSE2000	0110LCE210	1
Volkswagen / Mercedes	T5	2005	2009LHE2000	2009LAE200	-	
			2009LAE2000	2009LAE201	-	
	Sprinter Crafter	2006	H1	2104LAE2000	2104LAE200	-
			H2	2104LCE2000	2104LCE200	1
Renault / Opel / Nissan	NewTraffic Vivaro Primastar	2001	H1	1307LAE2000	1307LAE200	-
			H2	1307LCE2000	1308LCE200	-
	Master Movano NV400 Interstar	H1	2010	1609LAE2000	1609LAE200	-

	A	1x
	B	1x
	C	1x
	D	1x
	E	4x
	F	2x
	G	8x
	H	4x
	I	4x
	J	2x
	K	2x



Phone : (+33)2 37 51 65 18
serviceclients@mts-galleries.fr

AFF :
CRTL :

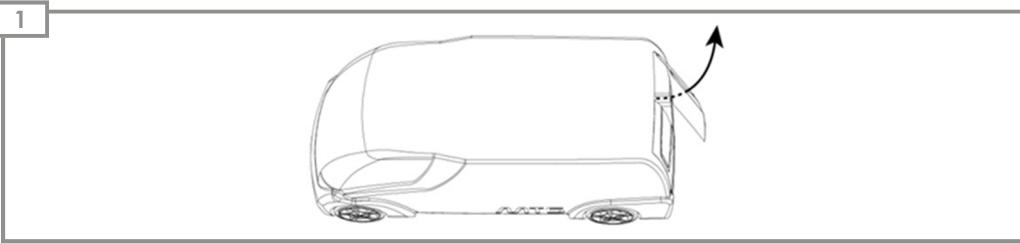

2

	A
0110LAE2000 0110LCE2000 0110LSE2000	340
2009LHE2000 / 2009LAE2000	275
2104LAE2000 / 2104LCE2000	330
1609LAE2000	320

5

F/ Les rainures des barreaux doivent être dirigées vers le haut.
 GB/ The grooves of the steps must be directed upwards.
 D/ Die Rillen auf den Sprossen müssen nach oben ausgerichtet sein.
 NL/ De rillen van de treden moeten naar boven zijn gericht.
 I/ Le scanalature degli scalini devono essere diretti verso l'alto.
 E/ Las ranuras de los escalones deben estar dirigidas hacia arriba.

6

	A
0110LAE2000 0110LCE2000 0110LSE2000	340
2009LHE2000 / 2009LAE2000	275
2104LAE2000 / 2104LCE2000	330
1609LAE2000	320

3

4

7

8